



VXT200S

True Wireless

Bluetooth Earphones

with Hybrid Active Noise Cancelling



INSTRUCTION MANUAL

Please read these instructions carefully and retain them for future reference.



TA-2023/0594
APPROVED

VKX-1119-BK / WT

CONTENTS

Highlights.....	3
Package Contents.....	3
Specifications.....	3
Identifying Parts.....	4
Volkano Audio App QR Code.....	5
Instructions For Use.....	6
Charging The Charging Case.....	6
Charging The Earphones.....	6
Switching The Earphones On & Off.....	7
Pairing The Earphones With Each Other.....	7
Pairing The Earphones With a Bluetooth Device.....	8
Locating The Bluetooth menu.....	8
Phone Calls.....	9
Controls.....	9
Troubleshooting.....	11
Disclaimer.....	11
Cleaning and Care Instructions - General.....	12
Safety Precautions.....	12
Environmentally Friendly Disposal.....	13
Warranty.....	14

HIGHLIGHTS

- Hybrid Active Noise Cancelling
- Environmental Noise Cancelling
- With 6 Built-in Microphones
- Up to 30 Hours of Playtime

PACKAGE CONTENTS

- VolcanoX VXT200S True Wireless Earphones with Hybrid Active Noise Cancelling
- Spare Eartips
- USB-C Charging Cable
- Instruction Manual

SPECIFICATIONS

Bluetooth:

- | | |
|------------|-----------------------|
| • Version | V5.4 |
| • Chipset | JL7016 |
| • Profiles | HSP, HFP, A2DP, AVRCP |
| • Distance | Up to 15 m |

Charging Case:


- | | |
|----------------------|---------------------|
| • Battery | 380 mAh |
| • Number of Charges | 3.5 Times |
| • Charging Time | 50 Minutes |
| • Charge Input | (Amps)DC 5V, 380 mA |
| • Charging Port Type | USB-C |

SPECIFICATIONS

Earphones:

- | | |
|----------------------|--|
| • Battery | 40 mAh (x2) |
| • Playback Time | 6 H (50% Volume ANC On)
6.5 H (50% Volume ANC Off)
5 - 5.5 H (100% Volume ANC On)
6 - 6.5 H (100% Volume ANC Off) |
| • Sensitivity | 98 dB |
| • Driver Size | 10 mm |
| • Impedance | 32 Ω |
| • Frequency Response | 20 Hz - 20 kHz |
| • IPX Level | IPX4 |

IDENTIFYING PARTS

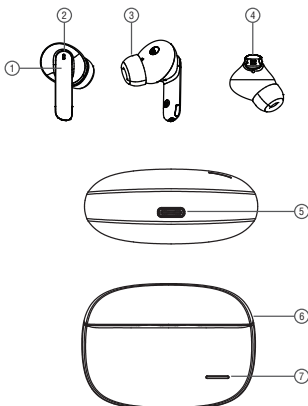

1. Multi-Function Touch Panel
2. Earphone Microphones
3. Earphone Cap
4. Pogo Pins
5. USB-C Charging Input Port
6. Charging Case
7. Charging Case LED Indicator Light

VOLKANO AUDIO APP QR CODE

- To access the Volkano Audio App, scan the QR Code below.



GET IT ON

Google Play



Download on the
App Store

- **Android Devices:** <https://www.pggyer.com/volkano>
- **Apple Devices:** <https://testflight.apple.com/join/AzsNazm9>

AUDIO CAUTION

Important:

Enjoy your Music Safely!

Take care of your hearing - avoid listening to loud music for extended periods. For more details on usage, safety guidelines and your 2-year limited warranty, please read through this Instruction Manual.

INSTRUCTIONS FOR USE

CHARGING THE CHARGING CASE

- Please ensure the battery of your VolcanoX VXT200S True Wireless Earphones and Charging Case are fully charged before using them for the first time.
- Place the earphones in the charging case and connect the USB-C charge cable provided to the USB-C charging input.
- Connect the other end of the USB-C charge cable to a standard wall charger or an available USB port on a compatible device.

Charging Case Battery Level:

- Solid green light indicates the charging case is fully charged.
- Flashing green light indicates the charging case is 70% to 100% charged.
- Flashing white light indicates the charging case is 30% to 69% charged.
- Flashing orange light indicates the charging case is 0% to 29% charged.

CHARGING THE EARPHONES

- Please ensure the battery is fully charged before using the earphones for the first time.
- Place the earphones into the charging case.
- The charging will begin automatically. The LED indicators on the charging case will flash green while charging.
- The LED indicators will turn solid green when the charging is complete.

Note: The earphones cannot be used while charging. The earphones will turn off when inserted into the charging case, even if powered on before charging.

SWITCHING THE EARPHONES ON & OFF

- The earphones switch on automatically when removed from the charging case.
- To switch the earphones on manually, press and hold the multi-function touch panel for about 2 seconds.
- To switch the earphones off, press and hold the multi-function touch panel for about 5 seconds. You will then hear a voice prompt stating that the earphones have been powered off. Or place the earphones back into the charging case.

Note: When the earphones are switched on manually, they must be switched on individually.

PAIRING THE EARPHONES WITH EACH OTHER

1. Turn on both earphones simultaneously by removing them from the charging case or switching them on manually. After powering on the earphones, wait a few seconds, and you will hear the earphones pair.
2. Should your earphones not pair automatically, you can put them into pairing mode by double pressing the multi-function touch panel on one of the earphones after powering them on. Before connecting to a Bluetooth device, wait for them to connect.

Note:

- To use the earbuds individually, remove one earbud from the charging case at a time and connect it to a Bluetooth device.

PAIRING THE EARPHONES WITH A BLUETOOTH DEVICE

- The earphones must be paired to a Bluetooth device before being used. However, it's only necessary to pair the earphones with a device once.
 - Please switch on your earphones before pairing them to a Bluetooth device.
 - When switched on, the earphones will automatically enter Bluetooth Mode.
1. Open the Bluetooth Menu on the device you wish to pair with (see “Locating the Bluetooth Menu” for more details). Some devices require you to select “Search for Devices” or “Add New Device” to pair via Bluetooth.
 2. Wait till you see “VXT200S” on your device screen.
 3. Select “VXT200S” on your device and follow any prompts to pair. Once pairing is complete and a connection is established, the earphones will emit a voice prompt stating “Pairing” indicating that the earphones are successfully connected.

LOCATING THE BLUETOOTH MENU

iPhone, iPad, and iPod Touch

- a. On your device, go to Settings.
- b. Select Bluetooth. If Bluetooth is not on, turn it on.
- c. The iPhone / iPad / iPod will search for new devices automatically.

Android™ Phones and Tablets

- a. On your device, go to the Settings Menu.
- b. Select Bluetooth (on older Android devices Bluetooth is found in the Wireless & Networks Menu). If Bluetooth is not on, turn it on.
- c. Select “Search for Devices” if your phone or tablet does not automatically search for new devices.

Note: If you are unsure how to access your Bluetooth Menu, please refer to your device's instruction manual.

PHONE CALLS

- When the earphones are paired to your smartphone, you can make or receive calls using the built-in microphones.
- When receiving a call, double press the Multi-Function touch panel on either earphone to answer calls. Press and hold the Multi-Function touch panel on the earphones to reject incoming calls.
- To end a call, double press the Multi-Function touch panel on either earphone.

Note: Only when your earphones are Bluetooth connected to your Smartphone will you be able to answer or reject calls via your earphones.

CONTROLS

1. Audio Controls

Function	Operation
Play/Pause Track	Double click the left/right multi-function button to play/pause.
Next Track	When using one earphone - Triple press the Multi-Function touch panel on the earphone. When using both earphones - Triple press the Multi-Function touch panel on the Right earphone.
Previous Track	When using both earphones - Triple press the Multi-Function touch panel on the Left earphone.
ANC Mode	Keep touching the right panel for 3 seconds to switch between ANC, Normal, and Transparency Mode.

CONTROLS

2. Volume Controls

Function	Operation
Increase Volume	Single click the right earphone to increase volume.
Decrease Volume	Single click the left earphone to increase volume.

3. Phone Calls

Function	Operation
Answer a Call or End a Call	Double press the Multi-Function touch panel.
Reject an Incoming Call	Press and hold the Multi-Function touch panel for 2 seconds.

4. Game/Music Mode

Function	Operation
Game/Music Mode	Press four times on the left earphone to enter Game/Music Mode.

5. Voice Assistant

Function	Operation
Activate Assistant	Press four times on the right earphone to activate/deactivate the voice assistant .

TROUBLESHOOTING

1. My smartphone cannot find any new Bluetooth devices?
 - a. Ensure the device has entered the pairing mode.
 - b. Ensure the device is within an effective working range.
2. Bluetooth device cannot pair up?
 - a. Ensure your mobile phone allows new connections and has yet to reach the maximum number of allowed devices.
3. The device does not play music when connected to a Bluetooth mobile phone.
 - a. Ensure your mobile phone supports A2DP profiles.
 - b. Ensure your mobile phone is within an effective working range.
4. When paired with my computer, Windows asks for a new driver. Can you supply this?
 - a. We recommend that you find compatible drivers for your computer online.
5. Why can I not remotely control the Pause / Play / Previous / Next functions when music plays?
 - a. This feature needs the Bluetooth device paired with the speaker to support AVRCP (Audio / Video Remote Control Profile). Please ensure your device supports this.

DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

CLEANING AND CARE INSTRUCTIONS - GENERAL

- **Before Cleaning:** Ensure that your Earphones are turned off before cleaning or maintaining your device.
- **Cleaning:** Wipe down the product's surface using a soft, slightly damp cloth.
- Do not use harsh or abrasive cleaning chemicals or materials on the product, as doing so may damage or scratch the finish.
- Do not expose the product to direct sunlight or high temperatures for extended periods.
- Do not store the product in temperatures over 60 °C.

SAFETY PRECAUTIONS

- This product is not intended for commercial use and has only been tested for household use.
- This product is not intended for small children or persons with limited mental capabilities. Ensure that this product is monitored by a guardian or parent.
- Never use your earphones near water or where they can come into contact with water. Never handle the charging case if it has been dropped into water or any liquid. It is a safety hazard if the product comes into contact with water while charging.
- Do not operate the product after it malfunctions, has been dropped, or has been damaged.
- **WARNING:** Always keep optional accessories, small parts and packaging out of the reach of babies and small children, as these items may be a choking hazard.
- DO NOT overcharge the charging case of the product. Doing so will shorten the lifespan of the built-in battery and could cause your device to overheat. The earphones will stop charging inside the case when the batteries are full.
- **CAUTION:** Do not disassemble or dispose of the battery in a fire.
- **CAUTION:** Remove the charging cable immediately if your battery shows signs of overheating, smoke or fumes being emitted during charging.

ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal. It enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.
- Never dispose of used electronics with ordinary solid waste since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. Please dispose of the device in a waste bin for electric devices.

 WARNING	Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warning.ca.gov .
---	--



WARRANTY

The VolcanoX VXT200S True Wireless Earphones with Hybrid Active Noise Cancelling include a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or failure to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase and the packaging for your warranty period.

NOTE:

The Warranty does not apply to a product that:

- a) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b) Has been misused or neglected.
- c) Has been damaged accidentally or by Force Majeure, including fire and flooding.
- d) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which do not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Please get in touch with the store of purchase if you require assistance or have questions about your warranty.

