

R2B



# Handleiding

Fietslicht voor -en achter

Mobiliteit, veiligheid en gemak voor iedereen!

# Installatie



De fietslampjes kunnen op twee manieren worden gemonteerd: verticaal of horizontaal.



**1** Bevestig de siliconen band aan het stuur of de zadelpen



**2** Maak de gesp van de band vast aan de houder



**3** Schuif onder een hoek van 45° in en draai om vast te zetten



**4** Klaar!

# Oplaadindicators



## Productdetails

|                | Wit voorlicht              | Rood achterlicht          |
|----------------|----------------------------|---------------------------|
| Lichtbron      | SZ5-M3*3PCS+2835*3PCS      | 2835*6PCS+3014*18PCS      |
| Helderheid     | 350LM+150LM                | 50LM+50LM                 |
| Gebruikstijd   | 4-35H                      | 4-33H                     |
| Batterij       | Lithium polymer (1100 mAh) | Lithium polymer (350 mAh) |
| Oplaadtijd     | 2.5 uur                    | 1.5 uur                   |
| Standen        | 8 standen                  | 12 standen                |
| Gewicht        | 45 gram                    | 33 gram                   |
| Afmetingen     | 50*40*30 mm                |                           |
| Materiaal      | PC                         |                           |
| Valbestendig   | Tot wel 3 meter            |                           |
| Waterdichtheid | IP65 gecertificeerd        |                           |

# Gebruiksaanwijzing


Druk één keer kort om het lampje in te schakelen en om van standen te wisselen; druk lang om het lampje uit te schakelen.

Knop A bestuurt het grootlicht (4 standen); knop B bestuurt het dimlicht (4 standen). Eén keer drukken om te schakelen tussen hoge, middelste en lage standen; dubbel drukken om de knipperlichtfunctie te activeren; lang drukken om het lampje uit te schakelen.



| Grootlicht (Knop A)                   | Dimlicht (Knop B)                                   |
|---------------------------------------|-----------------------------------------------------|
| Hoog<br>(blijft 4 uur branden)        | Hoog<br>(blijft 6 uur branden)                      |
| Midden<br>(blijft 8 uur branden)      | Midden<br>(blijft 10 uur branden)                   |
| Laag<br>(blijft 16 uur branden)       | Laag<br>(blijft 23 uur branden)                     |
| Knipperend<br>(blijft 12 uur branden) | Waarschuingsknipperlicht<br>(blijft 12 uur branden) |

Knop A bestuurt het grootlicht (6 standen); knop B bestuurt het dimlicht (6 standen). Eén keer drukken om te schakelen tussen de standen: hoog, midden, laag, waarschuingsknipperlicht, langzaam knipperlicht en stroboscoop. Lang drukken om het lampje uit te schakelen.

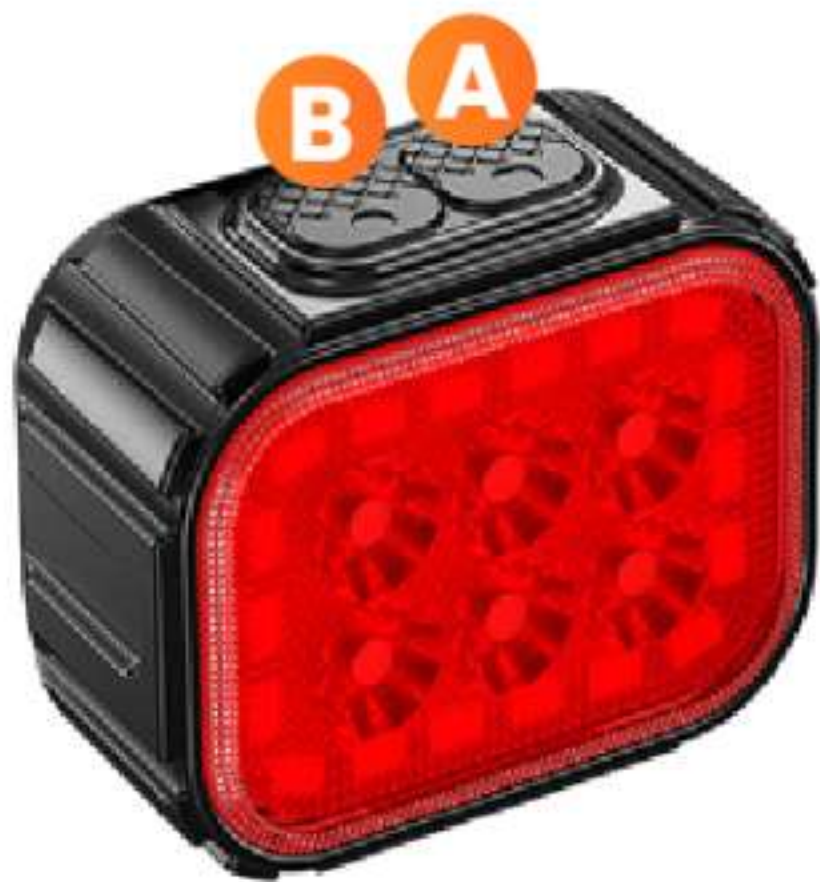

| Grootlicht (Knop A)                                 | Dimlicht (Knop B)                                   |
|-----------------------------------------------------|-----------------------------------------------------|
| Hoog<br>(blijft 4 uur branden)                      | Hoog<br>(blijft 4 uur branden)                      |
| Midden<br>(blijft 8 uur branden)                    | Midden<br>(blijft 8 uur branden)                    |
| Laag<br>(blijft 16 uur branden)                     | Laag<br>(blijft 16 uur branden)                     |
| Waarschuingsknipperlicht<br>(blijft 33 uur branden) | Waarschuingsknipperlicht<br>(blijft 33 uur branden) |
| Langzaam knipperlicht<br>(blijft 15 uur branden)    | Langzaam knipperlicht<br>(blijft 15 uur branden)    |
| Snel knipperlicht<br>(blijft 15 uur branden)        | Snel knipperlicht<br>(blijft 15 uur branden)        |

## Garantie en retourneren

### Kwaliteitsgarantie

R2B Store garandeert zijn klanten van een hoge Nederlandse kwaliteitsnorm, en daar zijn we trots op. Zo geldt voor al onze producten een standaard garantietermijn van 1 jaar tegen gebreken bij materiaal- of fabricagefouten. Daarnaast heeft dit product een CE-certificering en conformiteitsverklaring, waardoor het aan alle Europese regels en maatstaven voldoet.

### Verval garantie

Wij kunnen helaas geen garantie bieden in de volgende gevallen: a. Na verloop van bovenstaande garantietermijn b. Het defect is ontstaan ten gevolgen van oneigenlijk gebruik, verwaarlozing of door vallen en stoten.

### Aanspraak maken op garantie

Wil je aanspraak maken op garantie, of twijfel je of jouw situatie binnen de garantie valt? Neem dan contact met ons op, zodat wij de optie tot garantie samen kunnen bespreken!

### Retourneringsrecht

Ben je toch niet helemaal overtuigd, of heb je een andere aanleiding voor teruggave - om te retourneren? Dan kun je het product binnen 30 dagen, mits onbeschadigd en in de originele verpakking terugsturen voor retour. Na ontvangst en acceptatie van de retour ontvang je het volledige aankoopbedrag terug!

## Contact

Heb je vragen of opmerkingen over het product of onze service? Neem dan via onderstaande gegevens contact met ons op en we staan u graag te woord!

Telefoonnummer: 0299 77 94 53

E-mail: [info@r2bstore.nl](mailto:info@r2bstore.nl).


Bereikbaar van maandag tot en met vrijdag tussen 9:00 en 17:00.

R2B Store BV

Polderweg 7

1446 AA Purmerend

R2B

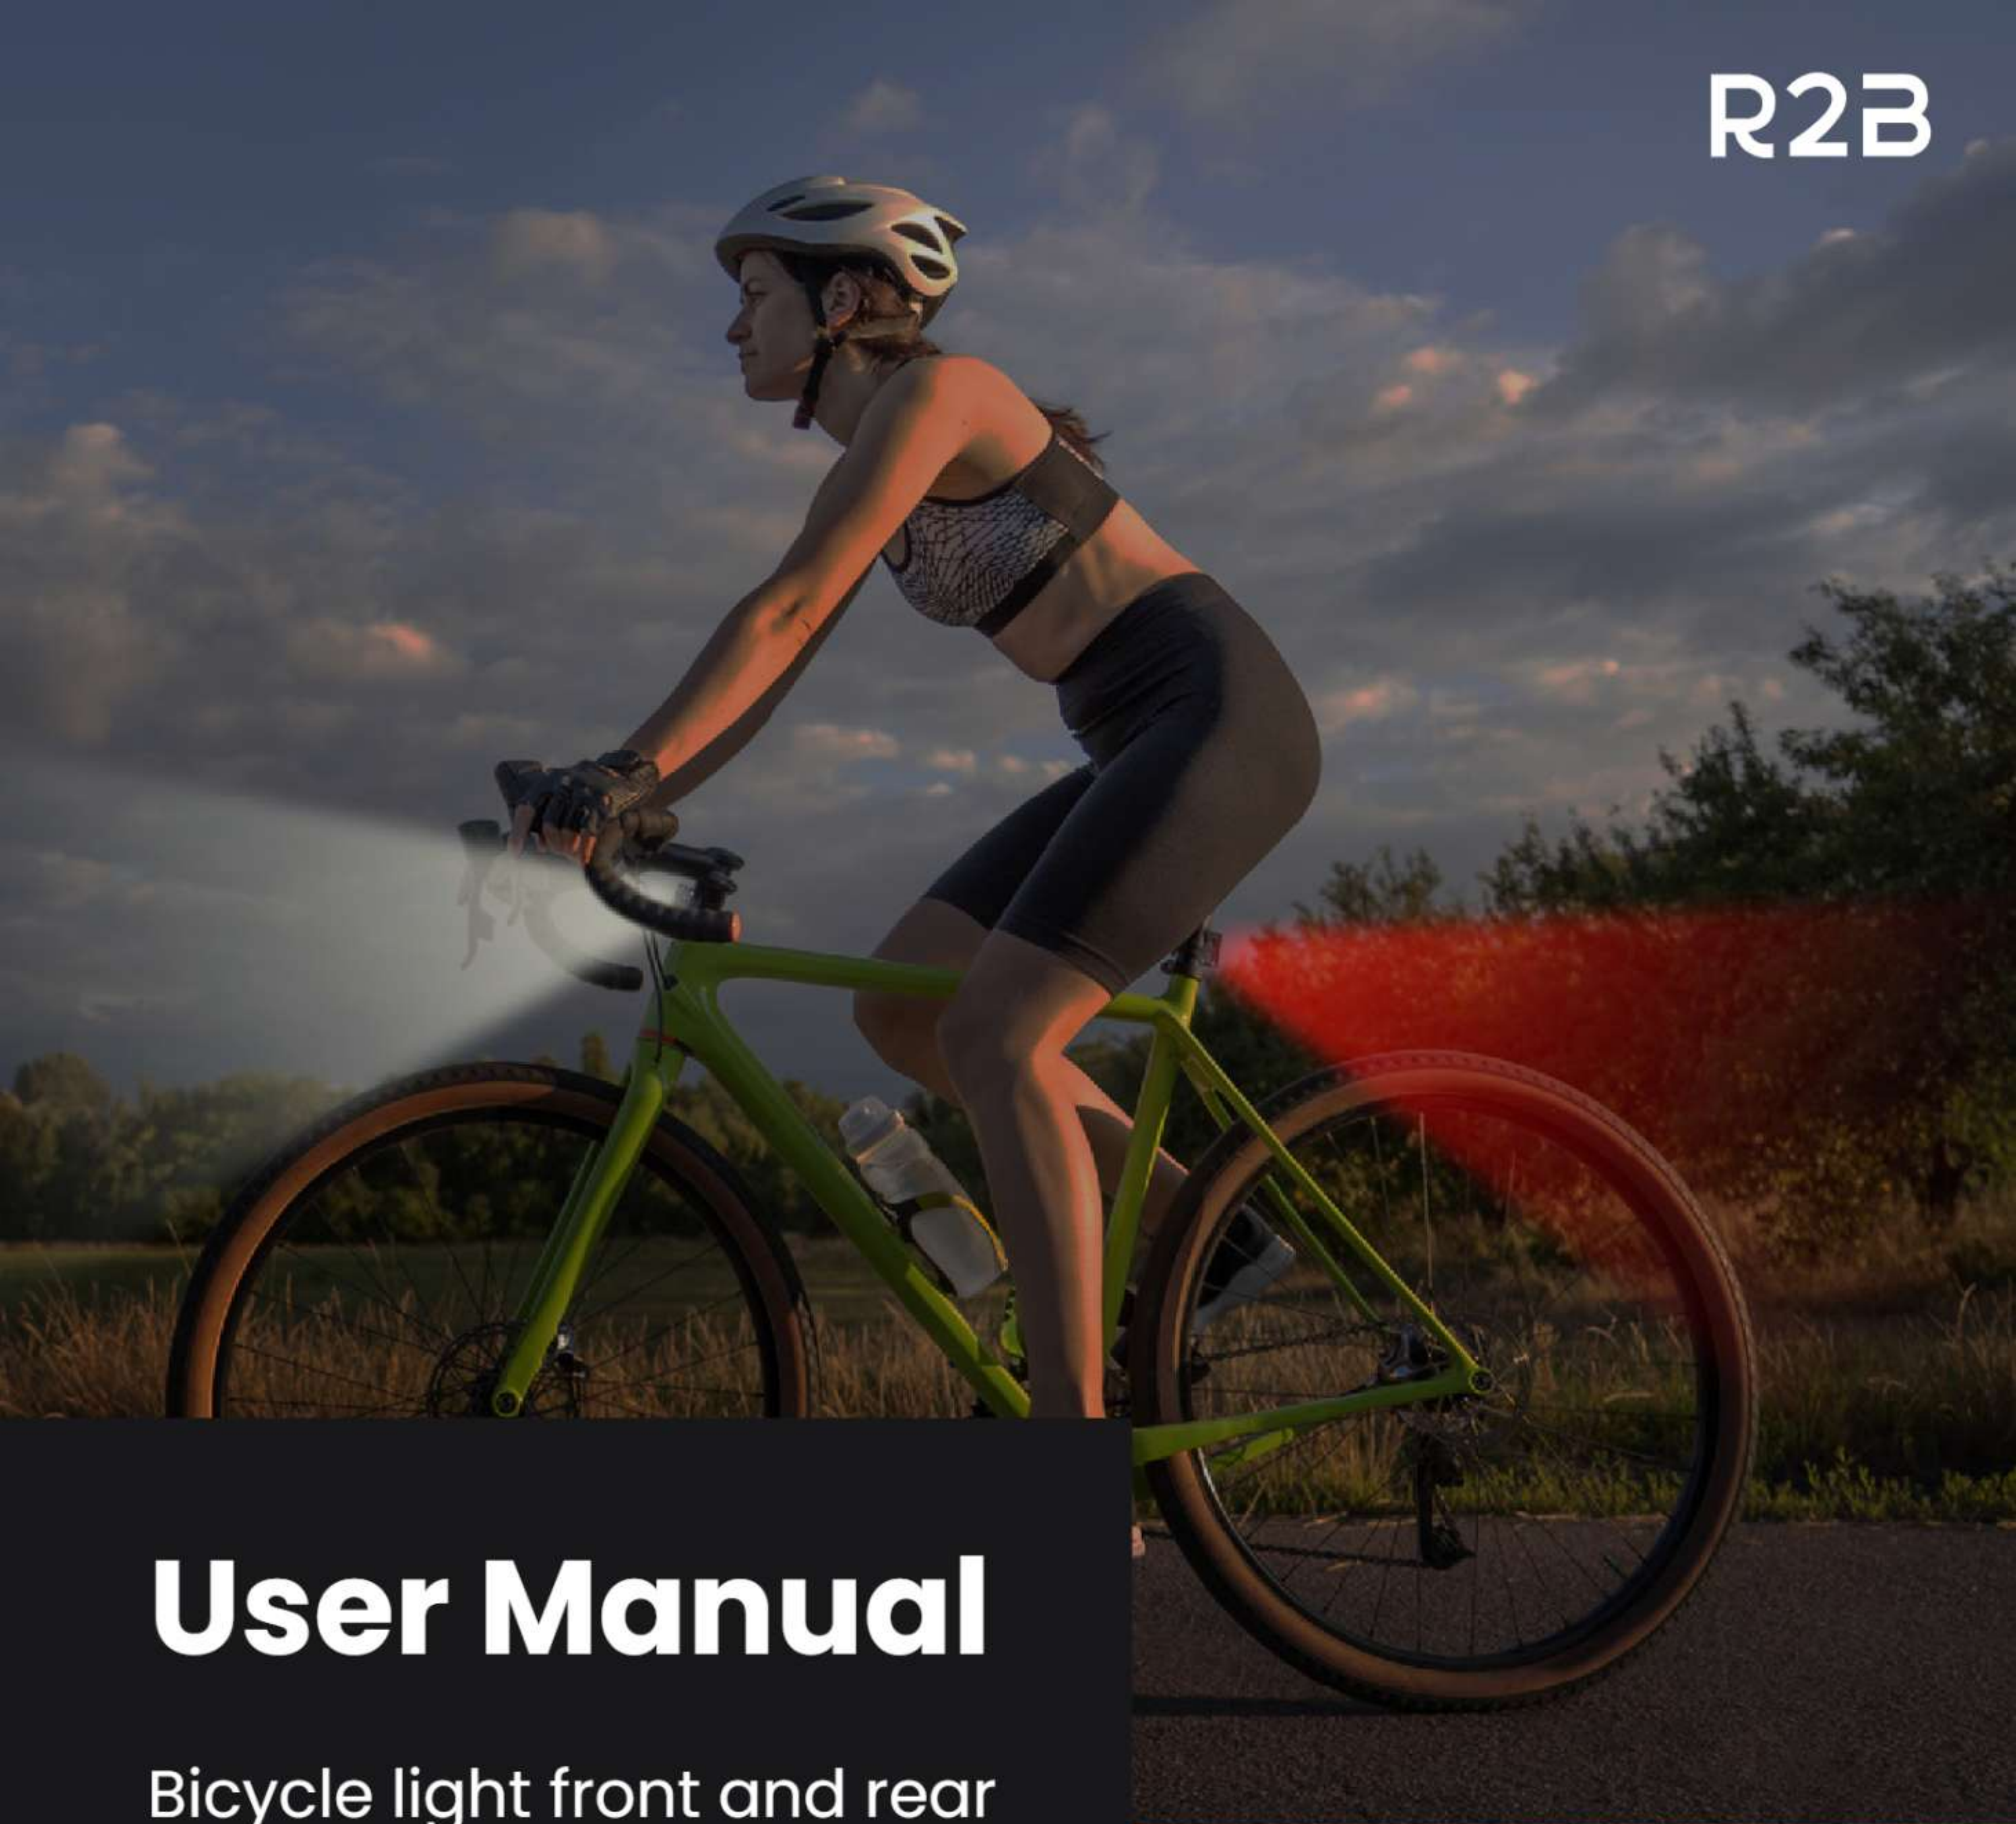


# User Manual

Bicycle light front and rear

Mobility, safety and convenience for everyone!

# Installation

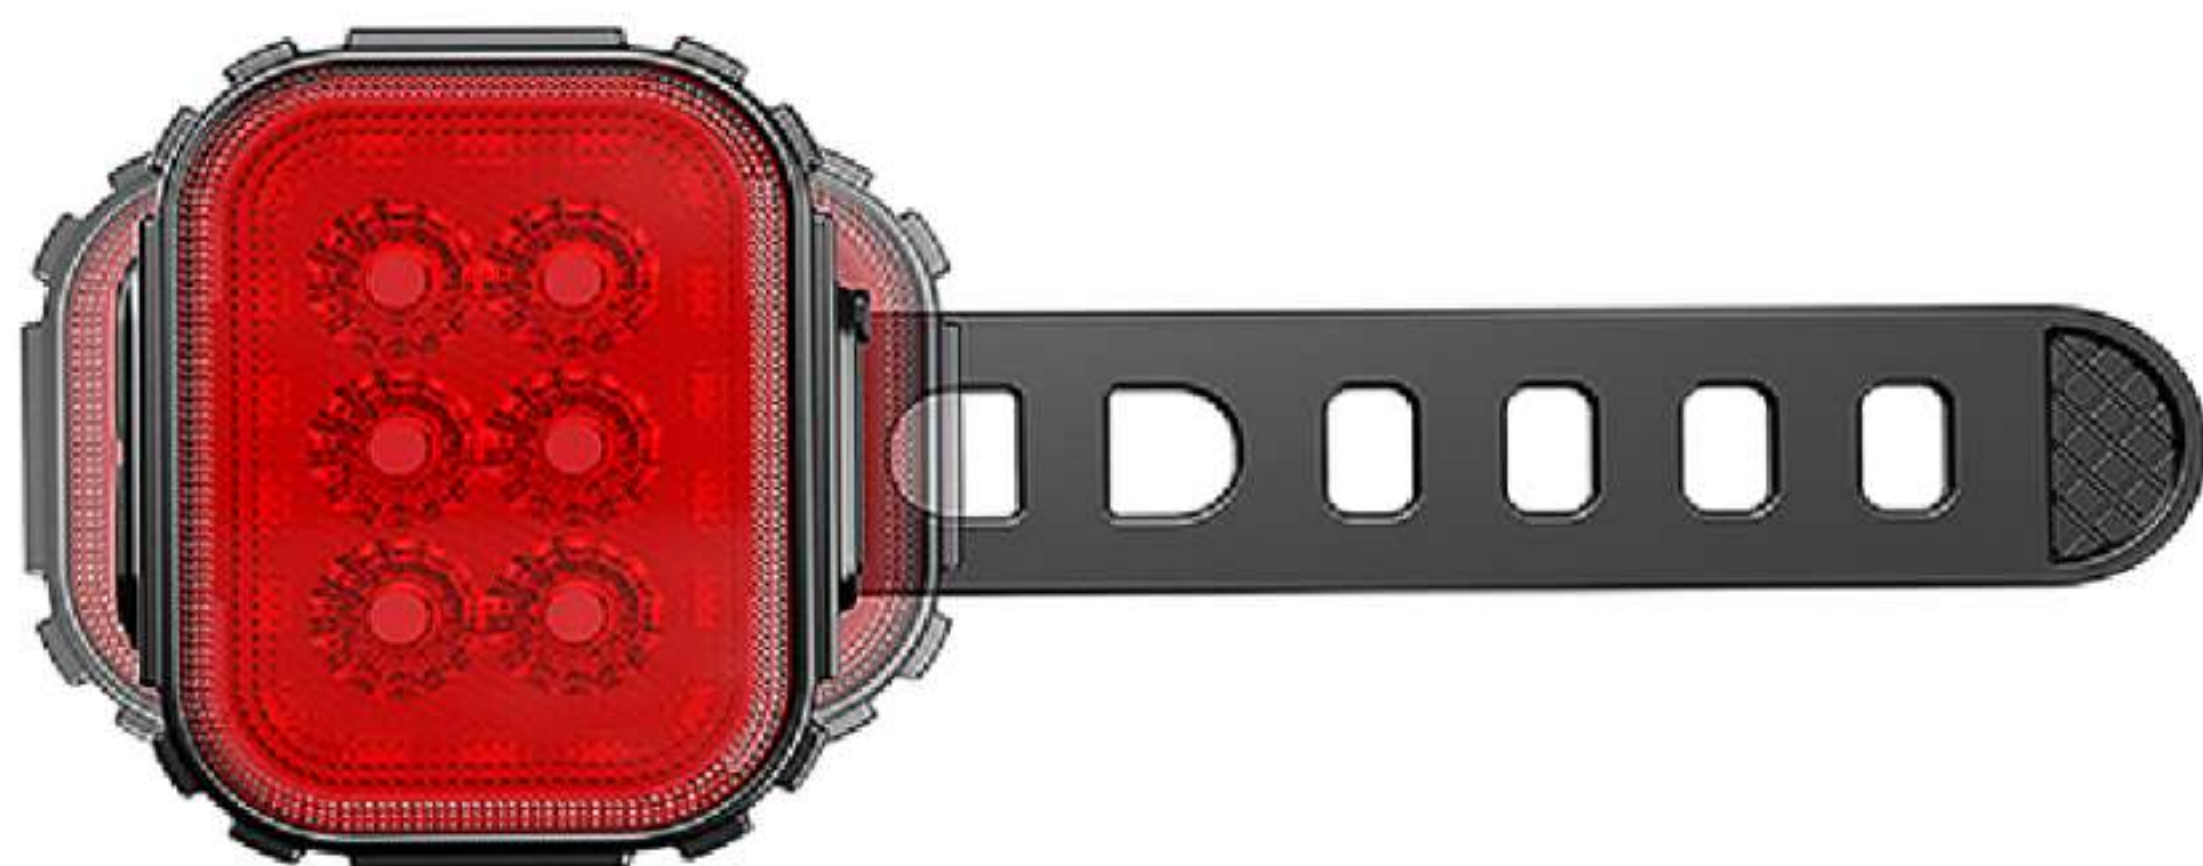

There are two ways to install the lights:  
vertical or horizontal.



**1** Attach the silicone strap to the handlebar or seat-post



**2** Tighten the strap buckle to the bracket



**3** Insert at a 45° angle and twist to lock



**4** Done!

# Charging indicators



# Product details

|                | White front light          | Red rear light            |
|----------------|----------------------------|---------------------------|
| Light Source   | SZ5-M3*3PCS+2835*3PCS      | 2835*6PCS+3014*18PCS      |
| Brightness     | 350LM+150LM                | 50LM+50LM                 |
| Operating time | 4-35H                      | 4-33H                     |
| Battery        | Lithium polymer (1100 mAh) | Lithium polymer (350 mAh) |
| Charging time  | 2.5 hours                  | 1.5 hours                 |
| Modes          | 8 modes                    | 12 modes                  |
| Weight         | 45 grams                   | 33 grams                  |
| Measurements   | 50*40*30 mm                |                           |
| Material       | PC                         |                           |
| Drop-resistant | Up to 3 meters             |                           |
| Waterproof     | IP65 certified             |                           |

# Instructions for use


Single press to turn on the light and to switch modes;  
long press to turn off the light.

Button A controls the high beam (4 modes); Button B controls the low beam (4 modes). Single press to switch between high, mid, and low modes; double press to activate the flash; long press to turn the light off.



| High Beam (Button A)       | Low Beam (Button B)               |
|----------------------------|-----------------------------------|
| High<br>(lasts 4 hours)    | High<br>(lasts 6 hours)           |
| Mid<br>(lasts 8 hours)     | Mid<br>(lasts 10 hours)           |
| Low<br>(lasts 16 hours)    | Low<br>(lasts 23 hours)           |
| Strobe<br>(lasts 12 hours) | Warning flash<br>(lasts 35 hours) |

Button A controls the high beam (6 modes); Button B controls the low beam (6 modes). Single press to switch between modes: high, mid, low, warning flash, slow flash, and strobe. Long press to turn the light off.

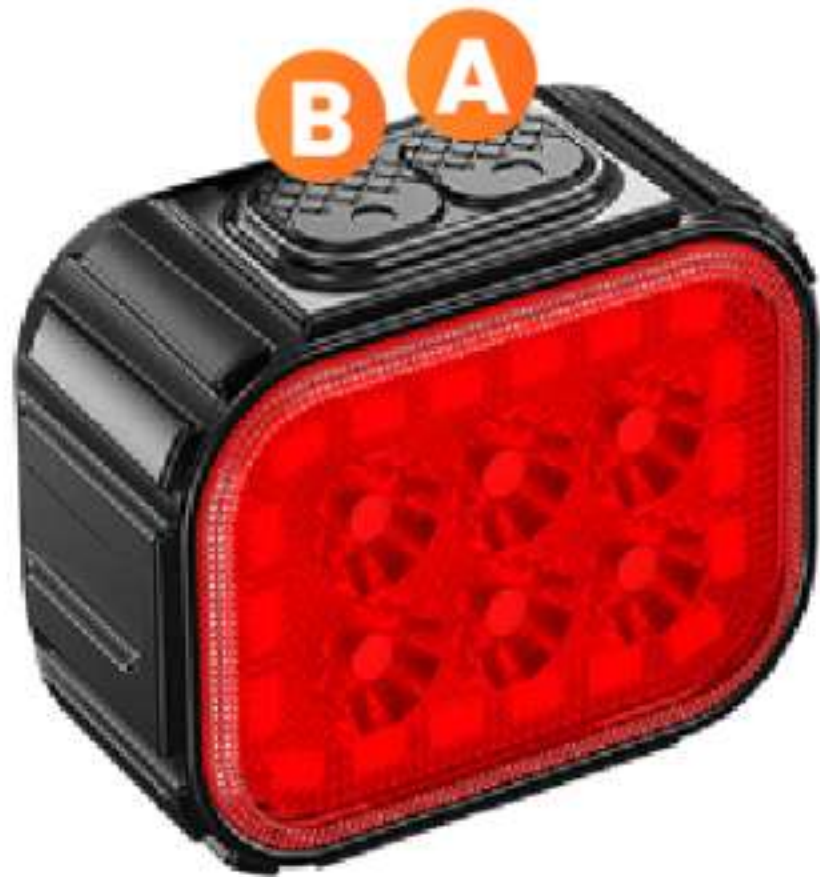

| High Beam (Button A)              | Low Beam (Button B)               |
|-----------------------------------|-----------------------------------|
| High<br>(lasts 4 hours)           | High<br>(lasts 4 hours)           |
| Mid<br>(lasts 8 hours)            | Mid<br>(lasts 8 hours)            |
| Low<br>(lasts 16 hours)           | Low<br>(lasts 16 hours)           |
| Warning Flash<br>(lasts 33 hours) | Warning Flash<br>(lasts 33 hours) |
| Slow Flash<br>(lasts 15 hours)    | Slow Flash<br>(lasts 15 hours)    |
| Fast Flash<br>(lasts 15 hours)    | Fast Flash<br>(lasts 15 hours)    |

## Warranty and returns

### Quality guarantee

R2B Store guarantees its customers a high Dutch quality standard, and that is where we are to be proud of. For example, a standard warranty period of 1 year applies to all our products defects due to material or manufacturing errors. In addition, this product has a CE certification and declaration of conformity, meaning it complies with all European rules and standards.

### Void warranty

Unfortunately, we cannot offer a guarantee in the following cases: a. After expiration above warranty period b. The defect arose as a result of improper use, neglect or due to falls and bumps.

### Making a warranty claim

Do you want to claim a warranty, or are you unsure whether your situation is covered by the warranty? Take please contact us so that we can discuss the warranty option together!

### Right of returns

Are you still not completely convinced, or do you have another reason for return – to return? Then you can return the product within 30 days, provided it is undamaged and in the original return packaging for return. You will receive it after receipt and acceptance of the return full purchase amount back!

## Contact

Do you have questions or comments about the product or our service?  
Then please use the information below contact us and we will be  
happy to assist you!

Phone number: 0299 77 94 53

Email: [info@r2bstore.nl](mailto:info@r2bstore.nl)

Available from Monday to Friday  
between 9:00 AM and 5:00 PM.

R2B Store BV  
Polderweg 7  
1446 AA Purmerend